

STAIRWAY FLOORING SOLUTIONS

kinetex®

Textile Composite Flooring

J+J Flooring Group's award-winning Kinetex textile composite flooring offers a high-performing solution for interior stairs of all types.

The innovative construction of Kinetex offers:

SAFETY



While wet, Kinetex has a higher slip-coefficient when compared to a wet hard surface — which offers a much safer area for walking and standing. It is the only floor covering of its kind certified by the National Floor Safety Institute as a high traction flooring.

Kinetex has the potential to absorb energy and reduce repetitive foot stress injuries.


DURABILITY

It features unsurpassed durability withstanding over 5 million foot traffic events.

EASE OF MAINTENANCE

Kinetex dries faster than carpet — perfect for cleaning while occupied.

It resists the most challenging stain agents and is easily sanitized and spot cleaned.

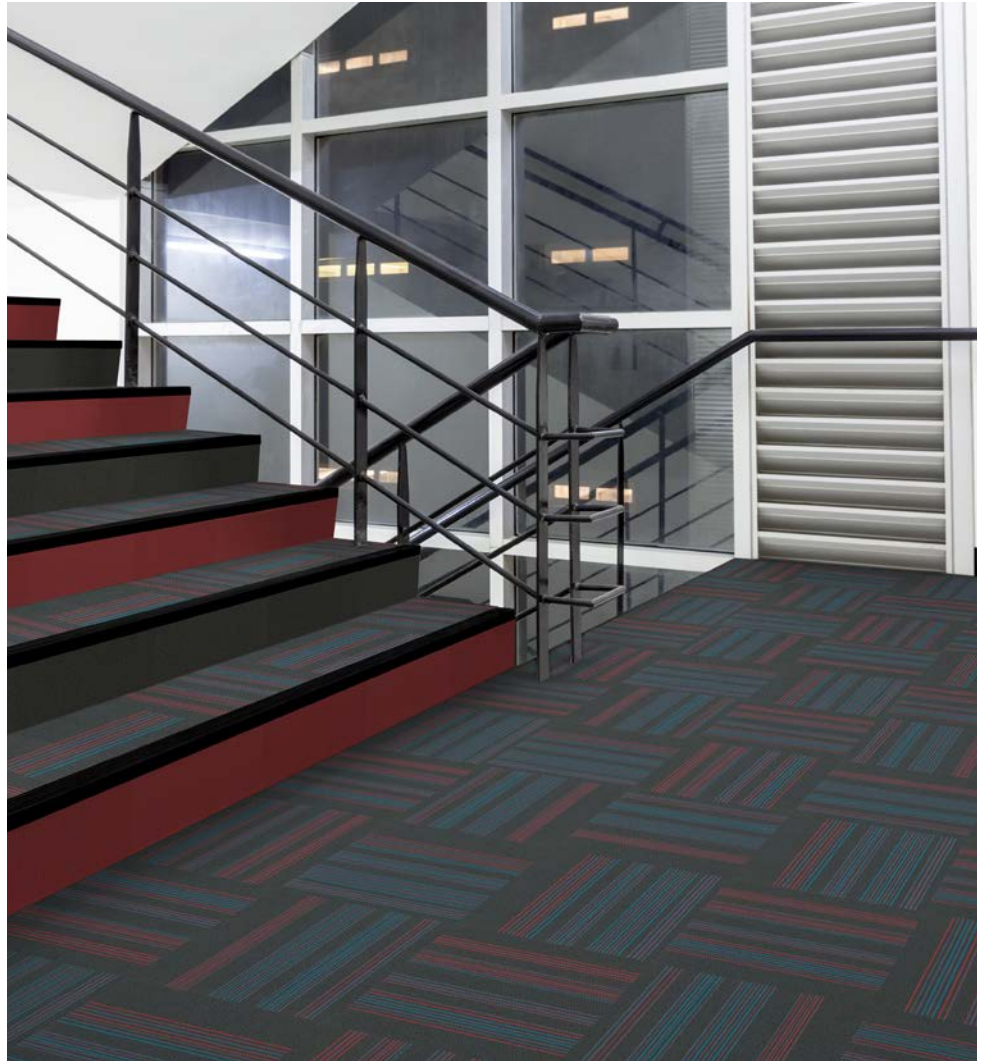

For installation of Kinetex on stairs, please review Kinetex Installation Instructions at www.jjflooringgroup.com.

Requirements for installation include:

- Use of Kinetex Adhesive for Kinetex modular or roll product.
- Use of stair nosing and the nosing manufacturers adhesive or contact adhesive to secure the nosing material.

Roll material available in solid or applied patterned styles, for areas 6 feet wide or less. Minimums may apply.

800.241.4586
jjflooringgroup.com

 FLOORING GROUP

Partnered with




The Kinetex Installation Instructions and Kinetex Maintenance Instructions are available electronically. Should you like a copy, please contact Marketing Services at 800.241.4586, extension 8020. For further questions or additional information, J+J Customer Relations can be reached at 800.241.4586.

INSTALLATION PROCEDURES FOR KINETEX MODULES

Make sure you inspect modules prior to installation. No claims will be honored if modules are installed with visible defects. Read all instructions prior to beginning installation.

Follow approved installation method(s) for each specific product. Please note that Pop (style 1816) should be used for borders and accents only.

See full Kinetex instructions at jjflooringgroup.com for site and modular material conditioning, surface preparation and subfloor preparation.

KINETEX INSTALLATION ON STAIRS

Single or double undercut stair nosing required. Since Kinetex will be flat to both the tread and riser, Kinetex Modular Adhesive or Kinetex backed with PreFix Pre-Applied Adhesive is required.

Kinetex Spread Adhesive - The spread rate for Kinetex Adhesive is approximately 900 square feet per four-gallon bucket and must be spread using a 1/16" x 1/32" x 1/32" U-notched trowel. Allow to dry until transparent or adhesive does not transfer to finger when touched.

PreFix Pre-Applied Adhesive - J+J Flooring Group's PreFix peel and stick Kinetex features a pre-applied adhesive that is fully integrated with the unique Kinetex backing. PreFix Primer, (included), must be used to ensure a dust-free substrate surface. Install modules on steps and risers, inserting the stair nosing edge and the top of the riser edge of each module into the vinyl undercut. For installation of Kinetex Modular on steps, nosing is required. The nosing manufacturers adhesive or contact adhesive is required to secure the nosing material. The riser material should receive an application of Kinetex Adhesive on both the riser and the backside of the module in order to achieve a secure bond.

COMPLETING THE INSTALLATION

To avoid dislodging modules, do not walk on or move furniture onto modules until the area is completely anchored. Roll entire area with a 75-100 lb. roller in both directions (north-south and east-west). It is also required that sheets of plywood or hardboard be laid over the new modular surface when transporting heavy furniture on carts or dollies. As a final step, vacuum the entire area with an upright vacuum.

FOLLOWING THE INSTALLATION

Please refer to the Kinetex Adhesive instructions for more specific and complete details. However, please note the following requirements:

1. The new installation of Kinetex flooring is not to be cleaned for 48 hours utilizing any wet or chemical cleaning process.
2. The indoor temperature should never fall below 55° F, regardless of the age of the installation.

NOTE: These installation recommendations are made for the experienced installer. Adherence to these procedures will result in a quality installation. Any questions concerning these recommendations or any special situation encountered should be directed to the J+J Customer Relations Department.

